


LANCOM GS-1108

Quick Reference Guide

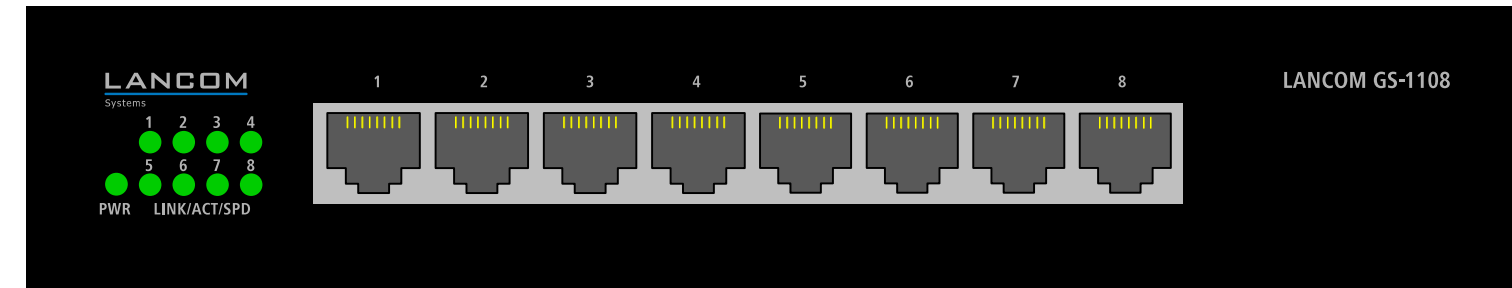

① **TP Ethernet ports**
Connect one of the TP Ethernet ports 1-8 via an Ethernet cable to your end device or another LAN switch.



①

② **Power connector (on the back side of the device)**
Supply power to the device via the power connector on the back. Please use the supplied IEC power cable.




Please observe the following when setting up the device

- > Do not rest any objects on top of the device and do not stack multiple devices
- > For devices to be operated on the desktop, please attach the adhesive rubber footpads



- > Keep the ventilation slots on the side of the device clear of obstruction
- > Mount the device into a 19" unit in a server cabinet

MOUNTING AND CONNECTING THE DEVICE

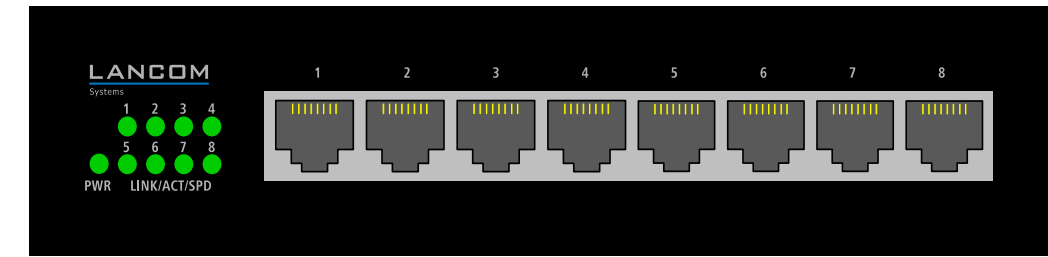

① ②

① PWR	
Off	Device switched off
Green	Device operational

② LINK/ACT/SPD	
Green, permanently	Link 1000 Mbps, no data transmission
Green, flickering	Data transmission 1000 Mbps
Orange, permanently	Link 10 / 100 Mbps, no data transmission
Orange, flickering	Data transmission 10 / 100 Mbps

Hardware	
Power supply	Internal power supply unit (110–230 V, 50-60 Hz)
Power consumption	max. 10 watts
Environment	Temperature range 0–40 °C; humidity 10–90 %; non-condensing
Housing	Robust metal housing 197,2 x 35,5 x 120 mm (W x H x D), network connectors on the front
Number of fans	None; fanless design without rotating parts, high MTBF
Interfaces	
ETH	8 TP Ethernet-Ports 10 / 100 / 1000 Mbps
Declaration of Conformity	
Hereby, LANCOM Systems declares that this device is in compliance with Directives 2014/30/EU and 2014/35/EU. The full text of the EU declaration of conformity is available at the following internet address: www.lancom-systems.com/ce/	
Package content	
Manual	Quick Reference Guide (DE/EN), FCC sheet
Cable	1 IEC power cord