



Please observe the following when setting up the device

- > For devices to be operated on the desktop, please attach the adhesive rubber footpads
- > Do not rest any objects on top of the device




- > Keep the ventilation slots on the side of the device clear of obstruction
- > In case of wall mounting, use the drilling template as supplied




- > Rack installation with the optional LANCOM Rack Mount (not supplied)



# LANCOM WLC-4006+ Quick Reference Guide

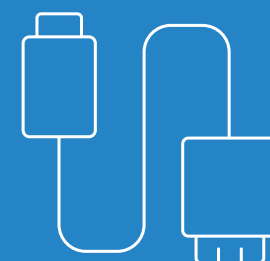

**LANCOM**  
Systems

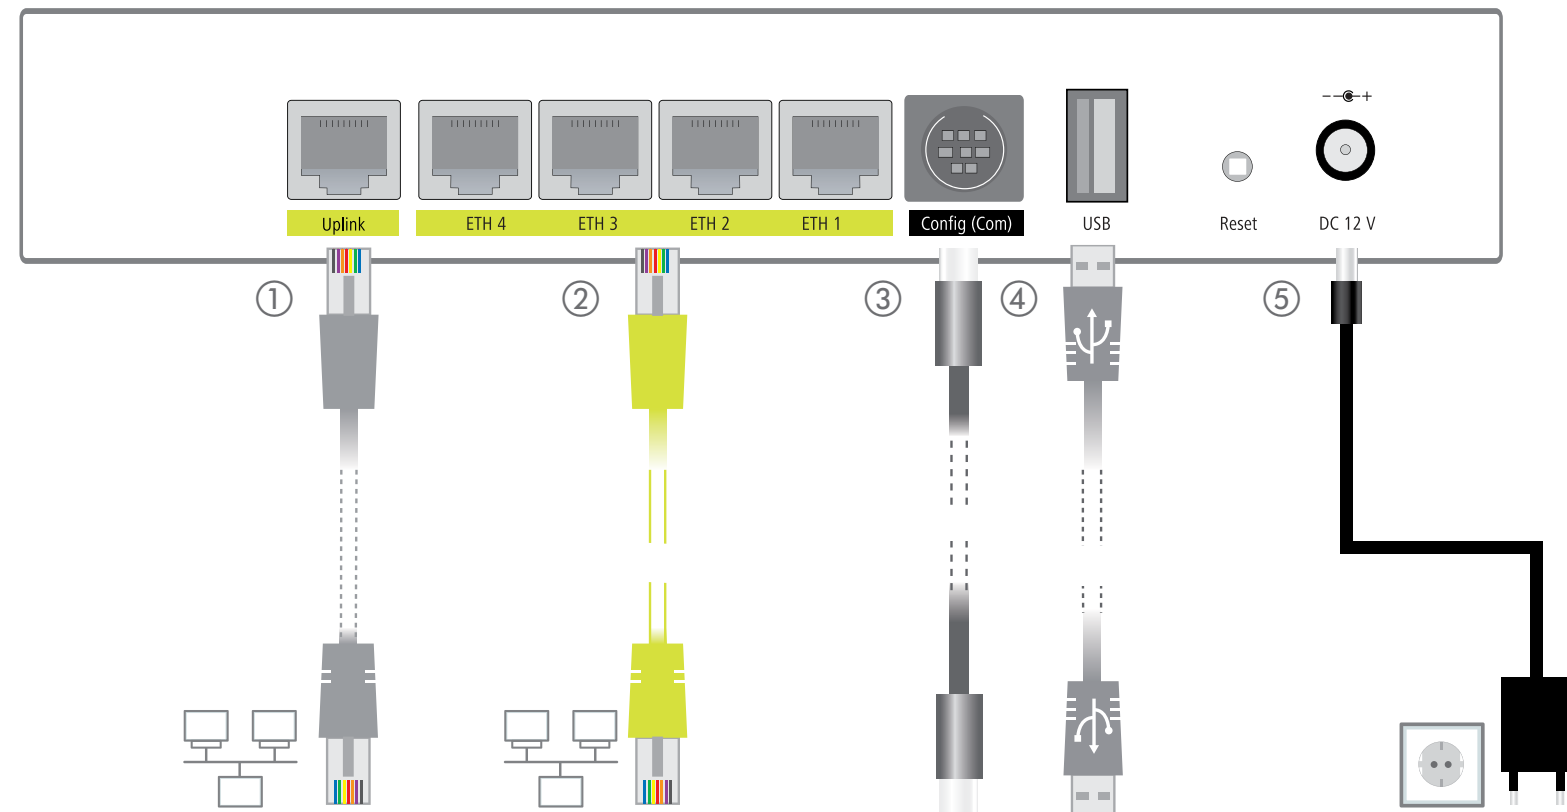

①

**Uplink interface**  
Connect the Uplink interface to a LAN switch or a WAN modem with a suitable cable.

②

**Ethernet interface**  
Use the cable with the kiwi-colored connectors to connect one of the interfaces ETH 1 to ETH 4 to your PC or a LAN switch.

③

 
**Serial interface**  
You can connect the device to a PC with a configuration cable (cable sold separately).

④

**USB interface**  
You can use the USB interface to connect a USB printer or a USB flash drive for device configuration.


⑤

**Power**  
When connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place.



Use only the supplied power adapter.

SETTING UP AND CONNECTING THE DEVICE

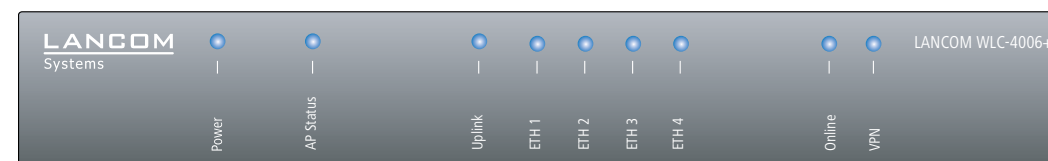

①

**① Power**

Off	Device switched off
Green, permanently	Device operational
Green/orange, blinking	Configuration password not set. Without a configuration password, the configuration data in the device is unprotected.
Red, blinking	Charge or time limit reached

②

**② AP Status**

Green, permanently	At least one active access point is connected and authenticated; no new and no missing access point.
Green/orange, blinking	At least one new access point.
Red, permanently	The LANCOM Wi-Fi controller is not yet operational; one of the following elements is missing: <ul style="list-style-type: none"> <li>&gt; Root certificate</li> <li>&gt; Device certificate</li> <li>&gt; Current time</li> <li>&gt; Random number for the DTLS encryption</li> </ul>
Red, blinking	At least one of the expected access points is missing.

③

**③ Uplink**

Off	No networking device attached
Green, permanently	Connection to network device operational, no data traffic
Green, flickering	Data transmission

④

**④ ETH**

Off	No networking device attached
Green, permanently	Connection to network device operational, no data traffic
Green, flickering	Data transmission

⑤

**⑤ Online**

Off	WAN connection inactive
Green, permanently	WAN connection active
Red, permanently	WAN connection error

⑥

**⑥ VPN**

Off	No VPN connection active
Green, permanently	VPN connection active
Green, blinking	Establishing VPN connections

Hardware	
Power supply	12 V DC, external power adapter (110 or 230 V) with bayonet connector to secure against disconnection
Power consumption	8.5 W
Environment	Temperature range 0–40 °C; humidity 0–95 %; non-condensing
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 x 45 x 140 mm (W x H x D)
Number of fans	None; fanless design, no rotating parts, high MTBF

Interfaces	
ETH	4 individual ports, 10 / 100 / 1000 Mbps Gigabit Ethernet. Each Ethernet port can be freely configured (LAN, WAN, monitor port, off). LAN ports operate in switch mode or isolated. Additionally, external DSL modems or termination routers can be operated at the Uplink port together with policy-based routing.
USB	USB 2.0 Hi-Speed host port for connecting USB printers (USB print server) or USB data media (FAT file system)
Config (Com)	Serial configuration interface / COM port (8-pin Mini-DIN): 9,600 - 115,000 baud, suitable for optional connection of analog / GPRS modems. Supports the internal COM-port server.
Uplink	10 / 100 / 1000 Mbps Gigabit Ethernet

WAN protocols	
Ethernet	PPPoE, Multi-PPPoE, ML-PPP, PPTP (PAC or PNS) and plain Ethernet (with or without DHCP), RIP-1, RIP-2, VLAN, IP, GRE, L2TPv2 (LAC or LNS), IPv6 over PPP (IPv6 and IPv4/IPv6 Dual Stack Session), IP(v6)oE (autoconfiguration, DHCPv6 or static)

**Declaration of Conformity**  
Hereby, LANCOM Systems declares that this device is in compliance with Directives 2014/30/EU and 2014/35/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.lancom-systems.com/ce/](http://www.lancom-systems.com/ce/)

Package content	
Documentation	Quick Reference Guide (DE/EN), Installation Guide (DE/EN), FCC leaflet (US version only)
Cable	Ethernet cable, 3m (kiwi-colored connectors)
WLC Public Spot	Function included in firmware
Power adapter	External power adapter, NEST 12 V / 1.5 A DC/5, coaxial power connector 2.1 / 5.5 mm bayonet, LANCOM item no. 110723 (EU, 230 V), or LANCOM item no. 110829 (UK, 230 V), or LANCOM item no. 111007 (US, 110 V)

LANCOM, LANCOM Systems and LCC6 are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. Subject to change without notice. No liability for technical errors and/or omissions. 1116.890717