


# LANCOM 1790VAW


## Quick Reference Guide



- ① **VDSL / ADSL interface**  
Use the supplied DSL cable for the IP-based line to connect the VDSL interface and the provider's telephone socket. For more information, please contact your Internet service provider.
- ② **Ethernet interfaces**  
Use the cable with the kiwi-colored connectors to connect one of the interfaces ETH 1 to ETH 4 to your PC or a LAN switch.
- ③ **Configuration interface**  
Use a serial configuration cable to connect the serial interface (COM) to the serial interface of the device you want to use for configuring / monitoring (separately available).

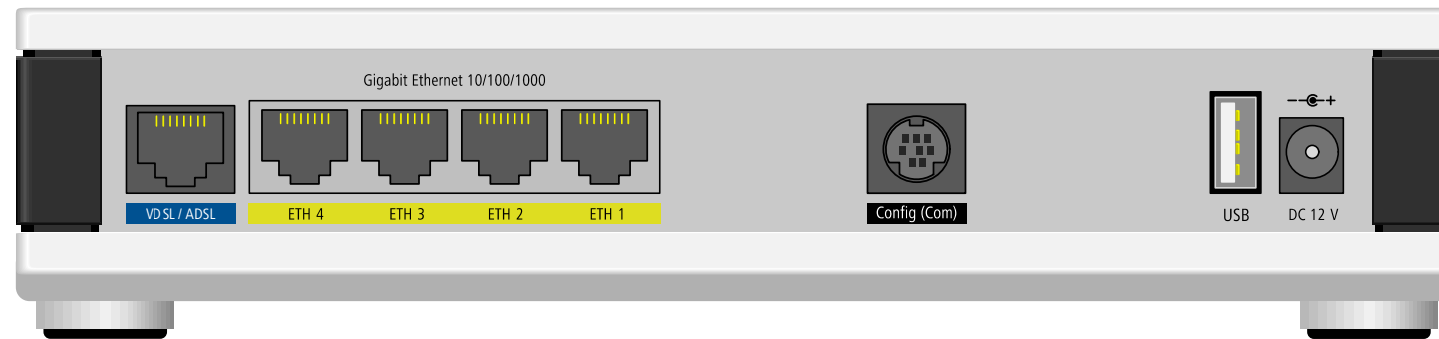

- ④ **USB interface**  
You can use the USB interface to connect a USB printer or a USB memory stick.
- ⑤ **Power**  
After connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place. Use only the supplied power adapter.



**Please observe the following when setting up the device**


- > Do not rest any objects on top of the device
- > For devices to be operated on the desktop, please attach the adhesive rubber footpads
- > In case of wall mounting, use the drilling template as supplied



- > Keep the ventilation slots on the side of the device clear of obstruction
- > Rack installation with the optional LANCOM Rack Mount (separately available)



MOUNTING AND CONNECTING THE DEVICE

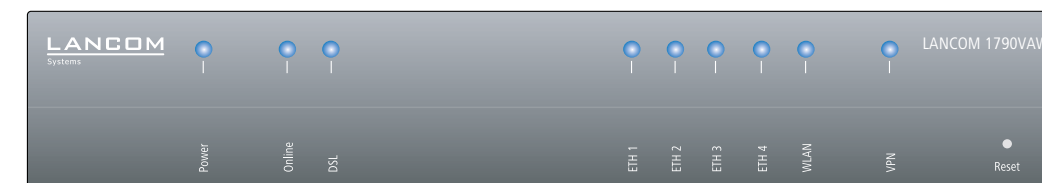

- ①
- ②
- ③
- ④
- ⑤
- ⑥
- ⑦

① Power	
Off	Device switched off
Green, permanently*	Device operational, resp. device paired / claimed and LANCOM Management Cloud (LMC) accessible
Red / green blinking	Configuration password not set. Without a configuration password, the configuration data in the device is unprotected.
Red blinking	Charge or time limit reached
1x green inverse blinking*	Connection to the LMC active, pairing OK, device not claimed
2x green inverse blinking*	Pairing error, resp. LMC activation code not available
3x green inverse blinking*	LMC not accessible, resp. communication error
② Online	
Off	WAN connection inactive
Green, permanently	WAN connection active
Red, permanently	WAN connection error
③ DSL	
Off	Interface deactivated
Green, permanently	DSL connection active
Green, flickering	DSL data transfer
Red, flickering	DSL transfer error
Red / orange, blinking	DSL hardware error
Orange, blinking	DSL training
Orange, permanently	DSL sync
Green, blinking	DSL connecting

④ ETH	
Off	No networking device attached
Green, permanently	Connection to network device operational, no data traffic
Green, flickering	Data transmission
⑤ WLAN	
Off	No Wi-Fi network defined or Wi-Fi module deactivated. The Wi-Fi module is not transmitting beacons.
Green, permanently	At least one Wi-Fi network is defined and Wi-Fi module activated. The Wi-Fi module is transmitting beacons.
Green, blinking	DFS scanning or other scan procedure
⑥ VPN	
Off	VPN connection inactive
Green, permanently	VPN connection active
Green, flashing	VPN connecting
⑦ Reset	
Reset button	Operated e.g. with a paper clip > short press: Restart the device > long press: Reset the device

Hardware	
Power supply	12 V DC, external power adapter (230 V); bayonet connector to secure against disconnection
Power consumption	Max. ca. 16 W
Environment	Temperature range 0–40 °C; humidity 0–95 %; non-condensing
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 x 45 x 140 mm (W x H x D)
Number of fans	1 quiet fan
Interfaces	
WAN: VDSL2	> VDSL2 as per ITU G.993.2; profiles 8a, 8b, 8c, 8d, 12a, 12b, 17a, 35b > VDSL2 Supervectoring as per ITU G.993.2 (Annex Q) > VDSL2 vectoring as per ITU G.993.5 (G.Vector) > Compatible to VDSL2 from Deutsche Telekom > Compatible to U-R2 from Deutsche Telekom (TR112) > ADSL2+ over ISDN as per ITU G.992.5 Annex B/J with DPBO, ITU G.992.3, and ITU G.992.1 > ADSL2+ over POTS as per ITU G.992.5 Annex A/M with DPBO, ITU G.992.3, and ITU G.992.1 > Supports just one virtual connection at a time in ATM (VPI-VCI pair)
Wi-Fi	> Frequency band: 2400-2483.5 MHz (ISM) or 5150-5825 MHz (restrictions vary between countries) > Radio channels 2.4 GHz: Up to 13 channels, max. 3 non-overlapping (2.4-GHz band) > Radio channels 5 GHz: Up to 26 non-overlapping channels (channels available vary according to country regulations; DFS for automatic dynamic channel selection required)
ETH	4 individual ports, 10 / 100 / 1000 Mbps Gigabit Ethernet, by default set to switch mode. Up to 3 ports can be operated as additional WAN ports. Ethernet ports can be electrically disabled in the LCOS configuration.
USB	USB 2.0 hi-speed host port for connecting USB printers (USB print server), serial devices (COM-port server) or USB drives (FAT file system)
Config (Com) / V.24	Serial configuration interface/COM-port (8-pin mini-DIN): 9,600 - 115,200 baud, suitable for optional connection of analog/GPRS modems. Supports internal COM-port server and provides transparent asynchronous serial-data transfer via TCP.
WAN protocols	
VDSL, ADSL, Ethernet	PPPoE, PPPoA, IPoA, Multi-PPPoE, ML-PPP, PPTP (PAC or PNS) and IPoE (with or without DHCP), RIP-1, RIP-2, VLAN
Declaration of Conformity	
Hereby, LANCOM Systems declares that this radio equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <a href="http://www.lancom-systems.com/ce/">www.lancom-systems.com/ce/</a>	
Package content	
Manual	Quick Reference Guide (DE/EN); Installation Guide (DE/EN)
Cable	1 Ethernet cable, 3 m (kiwi colored connectors); 1 DSL cable for an IP-based line, 4.25 m
Power adapter	External power supply adapter (230 V); NEST 12 V / 2 A DC/5; barrel / bayonet (EU), LANCOM item no. 111303 (not for WW devices)

This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.